

**M5B****Capsule Adapter**

Sennheiser Capsule  
to Shure-Type  
Transmitter

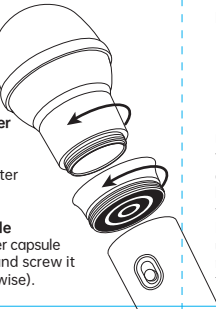
English Manual

**HOW TO USE****Attach the Adapter**

Screw the M5B adapter onto the handheld transmitter (clockwise).

**Install the Capsule**

Align the Sennheiser capsule with the adapter and screw it on securely (clockwise).

**Notes**

- Do not overtighten to avoid damage
- Ensure all connectors are clean before installation
- Compatibility may vary depending on capsule model

**OVERVIEW**

The M5B adapter allows Sennheiser capsules to be used with Shure-type handheld transmitters, including Xvive wireless systems.

It expands compatibility by enabling the use of a wide range of Sennheiser microphone capsules on Shure-standard transmitters.

**WORKS WITH THESE MODELS****Microphone Heads**

**Neumann®:** KK205 / KK204

**Sennheiser®:** MD9235 / ME9002 / ME9004 / ME9005 / MM435 / MM445 / MMD42-1 / MMD835BK / MMD845 / MMD935 / MMD945 / MME865 / MMK965

**Handheld Transmitter**

**Sony®:** DWZ-M / DWM-02 / UTX-M40

**Shure®:** AD2 / ADX2 / ADX2FD / AXT200 / PG2 / PGX2 / QLXD2 / SLX2 / SLXD2 / ULX2 / ULXD2 / UR2

**Lectrosonics®:** HH / Dhu **Xvive®:** MH100

Shure PG2, PGX2, QLXD2, SLX2, SLXD2, UR2, ULX2, ULXD2 and Sony DWZ-M handhelds cannot work with Neumann KK204, KK205 and Sennheiser MMK965, ME9002, ME9004, ME9005 capsules.

The Shure AD2 handheld does not work with the Sennheiser MMK965 capsule.

**SHENZHEN FZONE TECHNOLOGY CO., LTD.**

2nd floor, Building 12, Xicheng Industrial Area, Xixiang Town,  
Baoan District, Shenzhen Guangdong China. 518101

E-mail: support@xviveaudio.com

Tel: +86-755-2786 6639

www.xvive.com