



MH100 WIRELESS CARDIOID CAPSULE

Pro Wireless.
Instant Setup

PRODUCT INTRODUCTION

Thank you for choosing the Xvive MH100 Wireless Cardioid Capsule.

MH100 is a professional dynamic microphone capsule designed for use with the Xvive M5 Wireless Handheld Transmitter and compatible interchangeable-capsule wireless microphone systems. It delivers clear vocal reproduction, high gain-before-feedback performance, and reliable durability for live performance and professional audio applications.


COMPATIBILITY

MH100 is designed for use with: Xvive M5 Wireless Microphone System Wireless and handheld transmitters that use Shure® interchangeable capsule mounting interface. MH100 is compatible with many wireless handheld transmitters, including: Axient Digital Series (AD2, AD2FD) ULX-D Series (ULXD2) QUX-D Series (QLXD2) SLX-D Series (SLXD2) SLX Series (SLX2) ULX Series (ULX2) PGX Series (PGX2)


Shure® is a registered trademark of Shure Incorporated and has no affiliation with this product.

INSTALLATION

1. Power off the microphone before installing or removing the capsule.

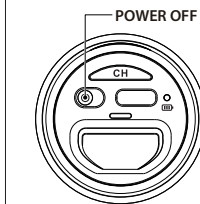


2. Align the MH100 capsule with the microphone body thread. Rotate clockwise until securely attached.

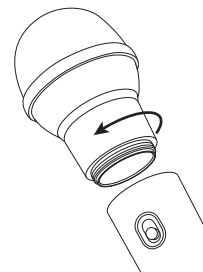

HANDLING AND MAINTENANCE

- Avoid dropping or other physical impact
- Protect from moisture and extreme temperatures
- Do not disassemble the capsule
- Clean using a dry, soft cloth only

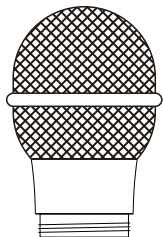

TECHNICAL SPECIFICATIONS


Capsule Type: Dynamic
Polar Pattern: Cardioid
Frequency Response: 60 Hz – 19 kHz
Sensitivity: -48 dBV
Output Impedance: 200 Ω
Maximum SPL: 136 dB SPL




Hereby, SHENZHEN FZONE TECHNOLOGY CO., LTD, declares that this type of equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

POLAR PATTERN

Measured at 1000 Hz

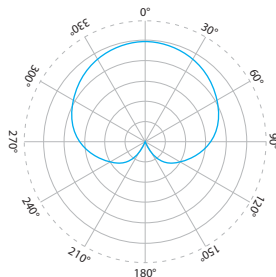

FREQUENCY RESPONSE

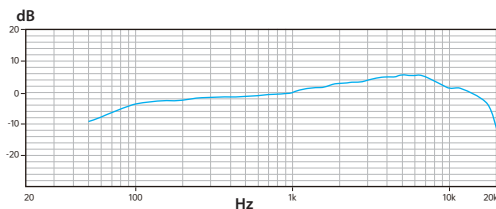

SAFETY INFORMATION

Please ensure that equipment connected to this product complies with local safety regulations.

CONTACT & SUPPORT

For technical support or service inquiries, please contact your dealer or visit: www.xvive.com

WARRANTY

MH100 is covered by a 1-year limited warranty against manufacturing defects.

The warranty does not cover:

- Normal wear and tear
- Physical damage or misuse
- Damage caused by moisture or improper installation
- Unauthorized modification or disassembly

For service support, please contact Xvive or your authorized dealer.



SHENZHEN FZONE TECHNOLOGY CO., LTD.

2nd floor, Building 12, Xicheng Industrial Area, Xixiang Town, Baoan District, Shenzhen Guangdong China. 518101
E-mail: support@xviveaudio.com
Tel: +86-755-2786 6639